

Earthwork Records System Plots Program Installation Guide

March 2008

This document is provided as a guide to install the Earthwork Records System Plots Program. It is strongly recommended that you read through this entire document prior to installing the software.

Release Notes


The Earthwork Records System Plots Program was formerly called the Density Log Books Plots Program. This is the full installation and replaces all previous versions the Density Log Books Plots Program. The following fixes and changes were made to the program:

- Renamed Program to Earthwork Records System Plots
- Fixed Length of Remarks Field on Drainage Records
- Updated Help File to Reflect Changes
- Fixed Printing Functions to allow Selection of Multiple Printers
- Repackaged as ERSinst.EXE


Installation Notes

Please note that this program requires administrative privileges for installation and that the software must be installed locally and will not run off a server.


1. Before installing Earthwork Records System Plots Program, uninstall the Density Log Book Plots Program.

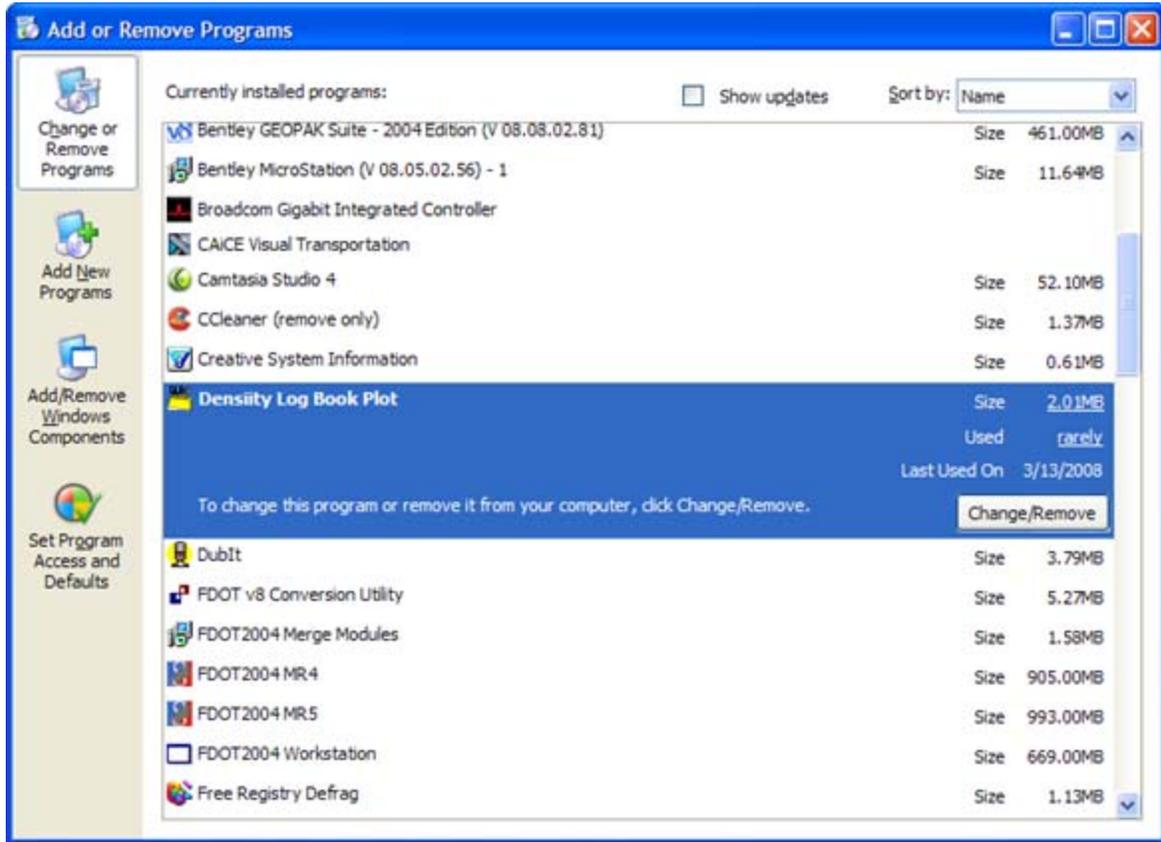


2. To install, execute the file **ERSinst.exe**.

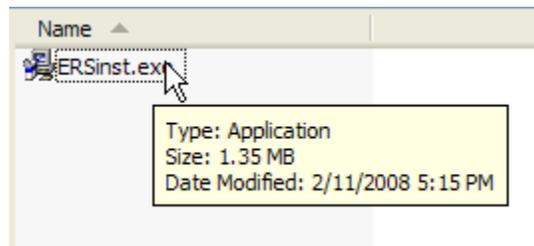


3. Earthwork Records System Plots Installation - Welcome displays. Click **Next** to continue.

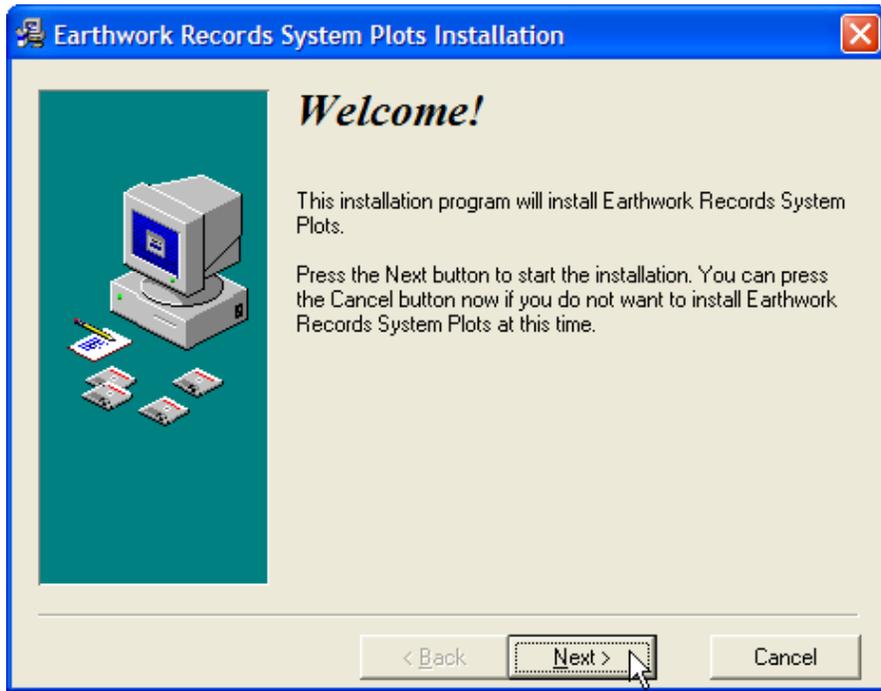

4. Earthwork Records System Plots Installation - Select Destination Location displays. Ensure the program's location is set to **C:\fdot2004\win32\Earthwork Records System Plots** and click **Next** to continue.

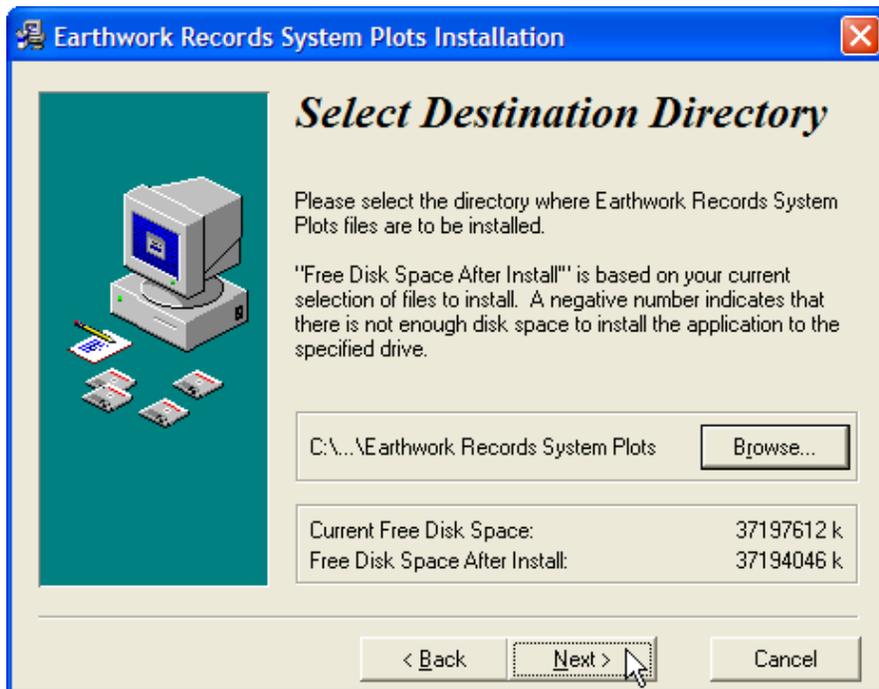


5. Earthwork Records System Plots Installation – Ready to Install displays. Click **Next** to continue.

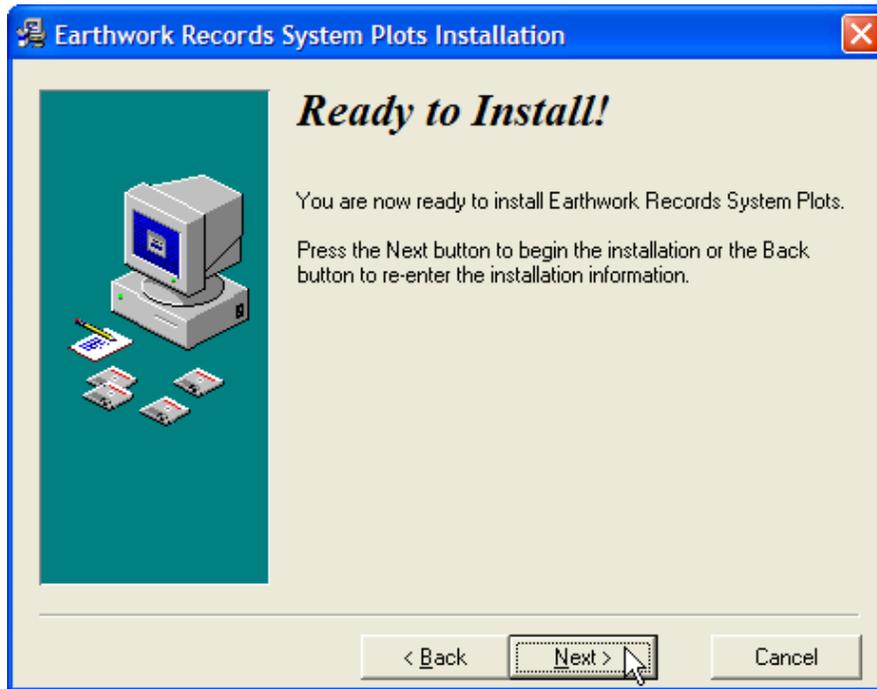


6. Earthwork Records System Plots Installation – Installation Completed appears when the program(s) finish installing. Click **Finish** to exit the installation application.




7. To verify the English units installation, select **Start** → **FDOT2004** → **ERSplot English**.

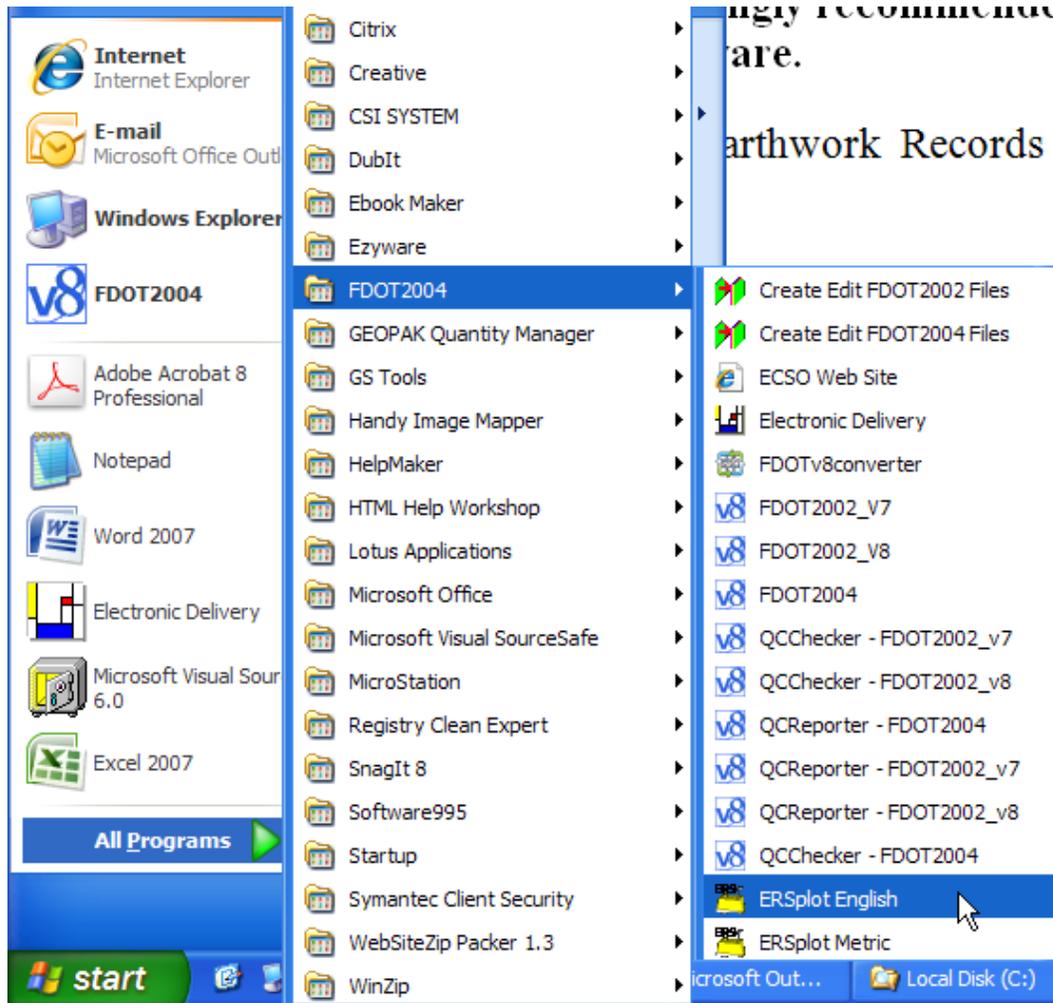

- When Earthwork Records System Plots 2.0.0 displays, select **Help** → **About**.

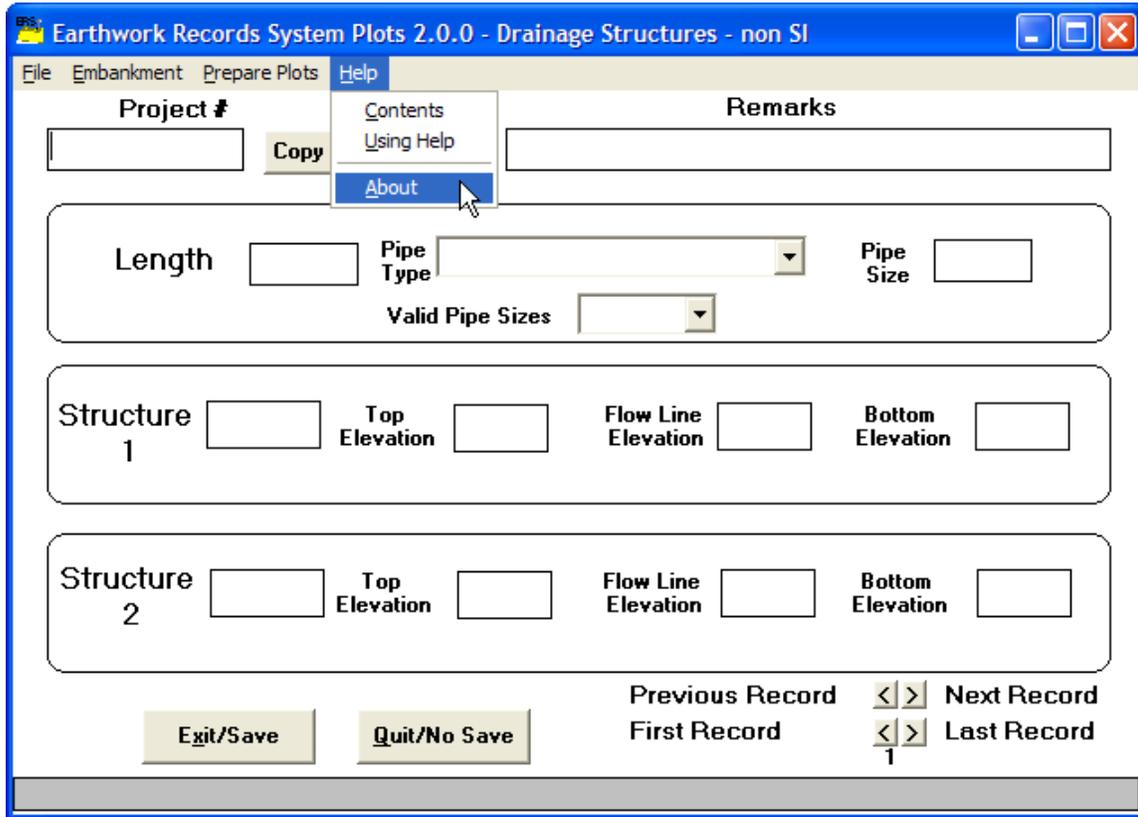

- About displays, showing the latest version to be **2.0.0**. Click **OK** to continue and then select **File** → **Exit** to exit the program.

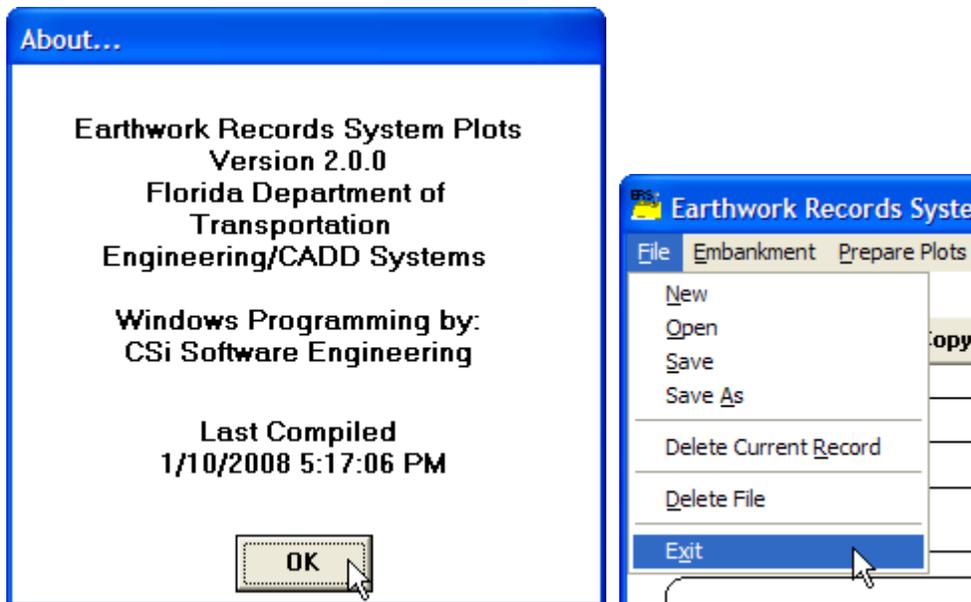

10. To verify the Metric units installation, select **Start** → **FDOT2004** → **ERSplot Metric** and repeat steps 8 and 9. About displays exactly as shown in Step 9.

