


**Attachment 10 - 3 - 4 - 2**  
**CPAM SECTION 10.3 -- FLOW CHART PROCESS 2**  
**CEI VERIFICATION \* PROCESS FOR CONTRACTOR MASS**  
**CONCRETE TEMPERATURE MONITORING**

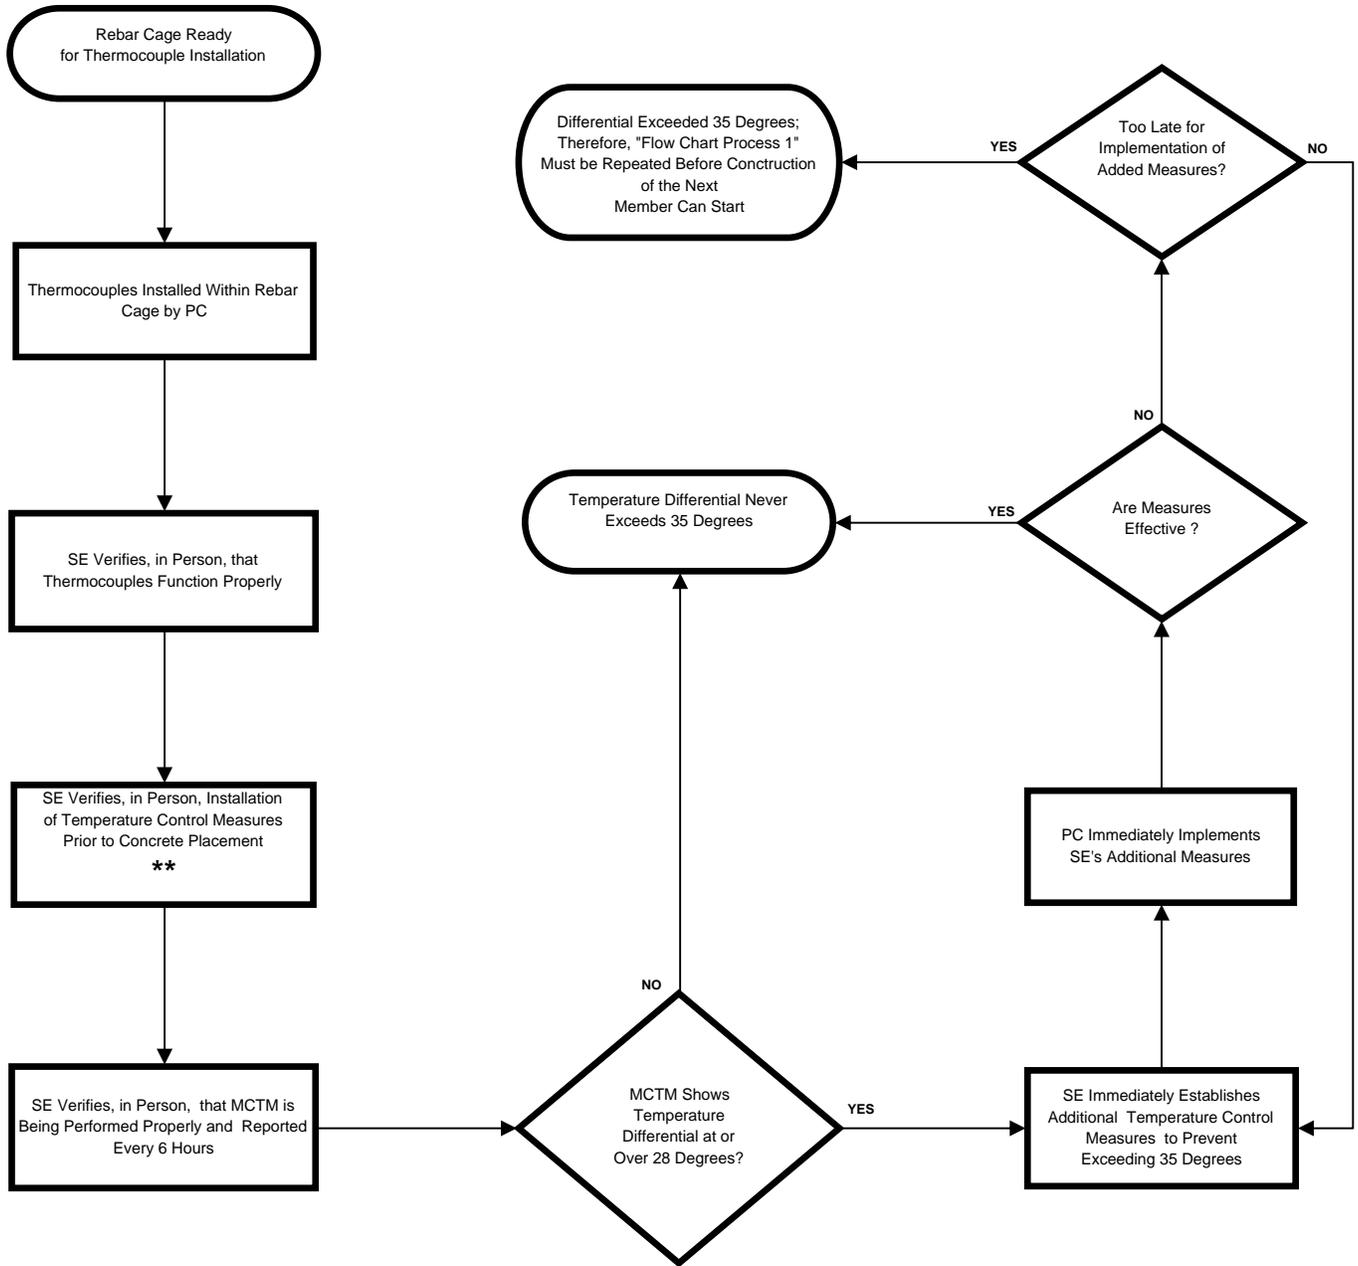

**ACRONYM KEY**

CEI ----- Construction Engineering and Inspection  
MCTM --- Mass Concrete Temperature Monitoring  
PC ----- Prime Contractor  
SE ----- Specialty Engineer

\* Each step in this process should be verified by CEI staff

\*\* Examples of Temperature Control Measures include insulating blankets, external heat application and cooled mixing water