


1. Spillway to be paid for as shoulder gutter.
2. If spillway empties into a shallow or median ditch, the detail should be modified as necessary.

DETAIL OF CONCRETE SPILLWAY AT END OF SHOULDER GUTTER
 (TO BE USED WHERE INLETS, PIPES & ENDWALLS ARE IMPRACTICAL)

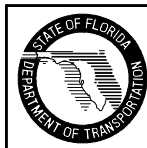

2008 FDOT Design Standards

CONCRETE SHOULDER GUTTER SPILLWAY

Last Revision 00	Sheet No. 1 of 1
---------------------	---------------------

Index No.
284